



Bespoke Scoreboards

Scoreboard mounting instructions when using a tripod

Erect the tripod into a stable position. Place the scoreboard mounting plate onto the top tube and tighten up the T Handle screw to prevent the mounting plate from swivelling around.

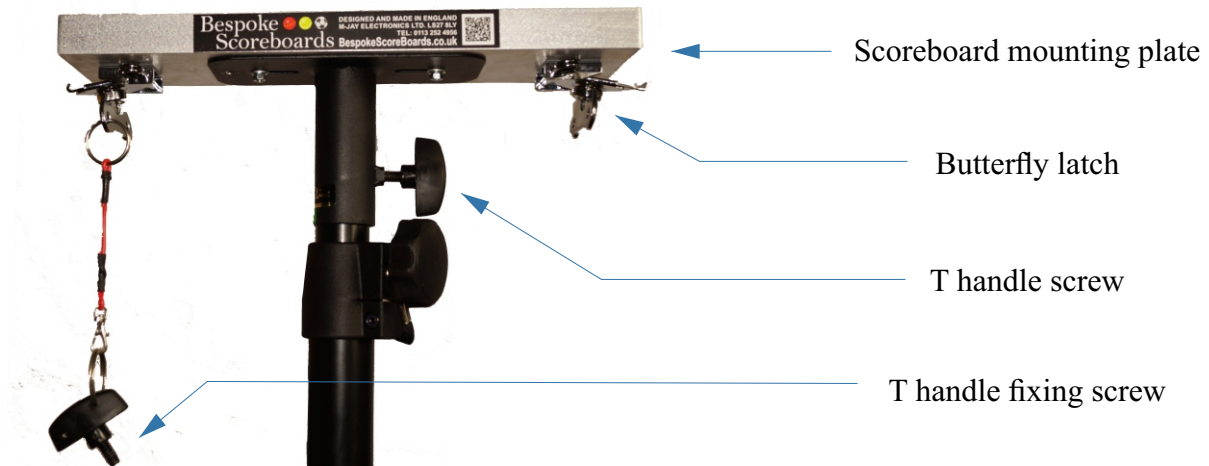

Ensure that the two butterfly latches hang down and out of the way. Lift the scoreboard onto the mounting plate, aligning the edge of the mounting plate with the two alignment arrows on the front of the scoreboard. Hold the scoreboard in position while attaching it to the mounting plate using the two butterfly latches.

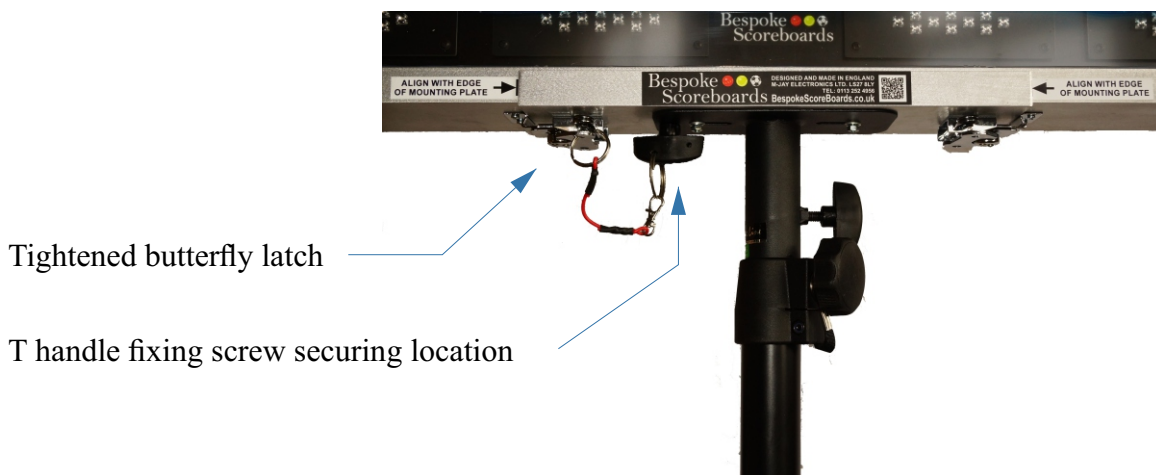

Tighten the butterfly latches by turning them clockwise so the hook engages with the clasps mounted to the underside of the scoreboard. The butterfly latches are primarily to help locate the scoreboard onto the mounting bracket, using only these brackets is not sufficient for securing the scoreboard to the mount. The T Handle fixing screw that has been provided must be used to properly secure the scoreboard. To not use the screw risks the scoreboard coming away from the mounting plate in winds or if it is pushed.

Depending on conditions, the tripod may need additional support to prevent it from being knocked over by either adding additional weight to the base of the tripod in the form of sandbags or similar, or by using guy lines to tether it down.

0113 252 4956

www.BespokeScoreboards.co.uk